 
 


APS-2 HOP UP CHAMBER manual

 
① . required "TM AEG inner barrel" and "adjustment hop Tube" and "chamber packing".




② . Attach the O-ring to the hop up chamber.




③ . Attach Spacer and packing to the inner barrel.



④ . Adjust hop hole direction of the inner barrel to hop hole of the chamber, and insert the inner barrel. Next, set the barrel spacer.

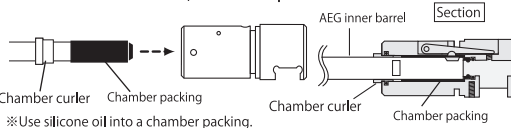


⑤ . Adjustment screws to fixing the inner barrel.

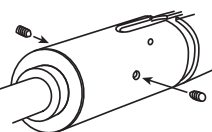


⑥ . Attach hop tube into a under hop bar.


※When the tube is long, please cut.

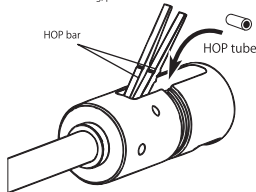

 ⑦ . Attach it to 15mm O-ring fit the groove.



 
⑧ . Attach the two adjustment screw from the bottom of the HOP UP chamber.




★ : Hop can be adjusted by turning the adjustment screw.

★ : You can adjust a ballistic trajectory finely each hop bar.


⑨ Set Spring in the hole.

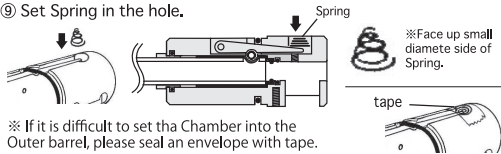

 ⑩ Please attach inner barrel and chamber packing into a the outer barrel with barrel spacer.



⑪ The outer barrel, the front outer guide, and the chamber are fixed with the machine screw.

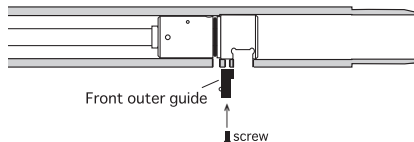

Complete