

APS TYPE96 HOP UP CHAMBER manual

- ① . required "TM AEG inner barrel" and "adjustment hop Tube" and "chamber packing".


TM AEG inner barrel

adjustment hop Tube

Chamber packing


※For inner barrel size 495mm

- ② . Attach the O-ring to the hop up chamber.




※There are grooves in the hole, please attach it to O-ring fit the groove.
※Please work with tweezers or precision screwdriver.

- ③ . Attach Spacer and packing to the inner barrel.




※ Please clean the inside of the inner barrel.

- ④ . Adjust hop hole direction of the inner barrel to hop hole of the chamber, and insert the inner barrel. Next, set the barrel spacer.

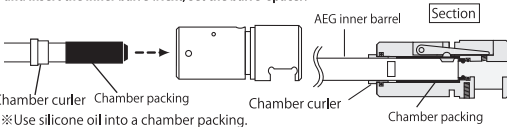


- ⑤ . Adjustment screws to fixing the inner barrel.


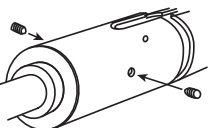


- ⑥ . Attach hop tube into a under hop bar.


※When the tube is long, please cut.

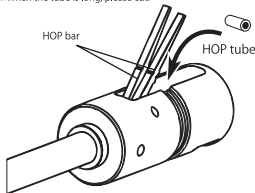

- ⑦ . Attach it to 15mm O-ring fit the groove.

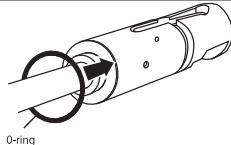

- ⑧ . Attach the two adjustment screw from the bottom of the HOP UP chamber.




★ : Hop can be adjusted by turning the adjustment screw.


★ : You can adjust a ballistic trajectory finely each hop bar.

Adjustment screw
Diameter 2.5mm×5mm


- ⑨ Set Spring in the hole.

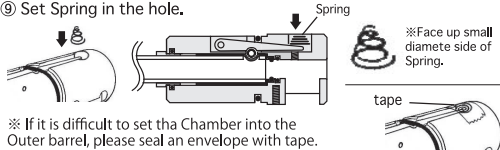

- ⑩ Please attach inner barrel and chamber packing into a the outer barrel with barrel spacer.



- ⑪ The outer barrel, the magazine guide, and the chamber are fixed with the machine screw.

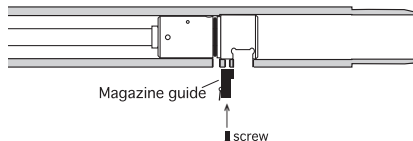

Complete