



# TM VSR-10 Bore Up HOP UP CHAMBER manual

① . required "TM AEG inner barrel" and "adjustment hop Tube" and "chamber packing".



※For inner barrel size . . . . . 430mm

② . Attach the O-ring to the hop up chamber.



※There are grooves in the hole, please attach it to O-ring fit the groove.


※Please work with tweezers or precision screwdriver.

③ . Attach Spacer and packing to the inner barrel.




※ Please clean the inside of the inner barrel.

④ . Adjust hop hole direction of the inner barrel to hop hole of the chamber, and insert the inner barrel. Next, set the barrel spacer.




※Use silicone oil into a chamber packing.

⑤ . Adjustment screws to fixing the inner barrel.

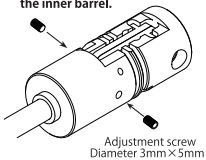


⑥ . Attach hop tube into a under hop bar.


※When the tube is long, please cut.

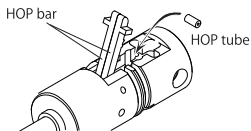

⑦ . Attach it to 20 mm O-ring fit the groove.




⑧ . Attach the two adjustment screw from the bottom of the HOP UP chamber.

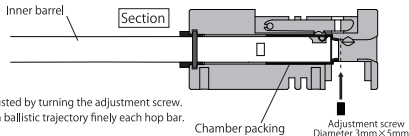


★ : Hop can be adjusted by turning the adjustment screw.

★ : You can adjust a ballistic trajectory finely each hop bar.

⑨ . Please attach inner barrel and chamber packing into the outer barrel with barrel spacer.



⑩ . HOP UP chamber attach to the chamber block.

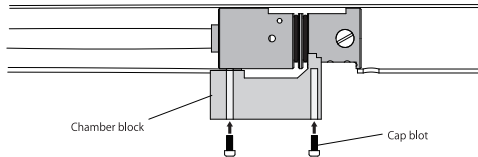

⑪ . Attach the outer barrel to the receiver.

※This product VDI VSR 80spring, AEG433mm inner barrel and has been designed for use.

※Please check the muzzle velocity.